

# INSTALLATION INSTRUCTION

## Suspension - Floor Lamp

FL-1750



MODERN FORMS  
A WAC LIGHTING COMPANY

### WARNING

- Read all instructions before installing.

### CAUTION

- All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken. Failure to follow this instruction could invalidate the ETL/CETL listing of this fixture.  
CAUTION When handling the fixture, do not apply pressure to the LEDs. Hold the fixture by the base only.

### AVERTISSEMENT

- Lisez toutes les instructions avant d'installer.

### MISE EN GARDE

- Toutes les pièces doivent être utilisées tel qu'il est indiqué dans ces instructions. Ne remplacez pas les pièces, n'en laissez pas de côté et ne les utilisez pas si elles sont usées ou brisées. Le non-respect de ces instructions peut annuler l'homologation ETL/CETL du luminaire. MISE EN GARDE Ors de la manipulation de l'appareil, ne pas appliquer de pression à la LED, tenir l'appareil par la seule base.

### ADVERTENCIA

- Lea y comprenda todas las instrucciones e ilustraciones por completo antes de proceder con el ensamblaje e instalación de esta lámpara.

### PRECAUCIÓN

- Todas las piezas deben usarse como lo indican estas instrucciones. No reemplace las piezas, no omita piezas durante la instalación ni utilice piezas gastadas o rotas. El incumplimiento de esta indicación podría invalidar la calificación ETL/CETL esta lámpara. PRECAUCIÓN Al manipular el aparato, no aplique presión a los LED, mantenga el aparato en la base sólo.

### HARDWARE HDW-FL-1750

A1



Allen Screw  
Qty: 4 pcs

B1



Spring Washer  
Qty: 4 pcs

C1



Allen Screw  
Qty: 4 pcs

D2



Allen Wrench  
Qty: 1 pc

modernforms.com  
Phone (800) 526.2588  
Fax (800) 526.2585

Headquarters/Eastern Distribution Center  
44 Harbor Park Drive  
Port Washington, NY 11050

Central Distribution Center  
1600 Distribution Ct  
Lithia Springs, GA 30122

Western Distribution Center  
1750 Archibald Avenue  
Ontario, CA 91760



# INSTALLATION INSTRUCTION

## Suspension - Floor Lamp

FL-1750



MODERN FORMS  
A WAC LIGHTING COMPANY


### PREPARATION & INSTALLATION

1. Carefully unpack your new lamp, lay out all the parts on a clear area. Be careful not to lose any small parts.
2. Put the tube on the base, secure it with spring washer (B1) and Allen screw (A1) using Allen wrench (D1)
3. Insert the arm into the tube and fasten it with Allen screw (A1) using Allen wrench (D1).
4. Put the lamp body onto the arm, secure it with Allen screw (C1) using Allen wrench.
5. Make sure the base direction is aligned with tube, arm and lamp body.
6. Connect power supply with connector.
7. Plug into outlet.

This lamp features a touch dimmer.

To choose desired brightness by tapping the dimmer switch:

- 1<sup>st</sup> tap – Turn on
- 2<sup>nd</sup> tap – Brighter
- 3<sup>rd</sup> tap – Max. Brightness

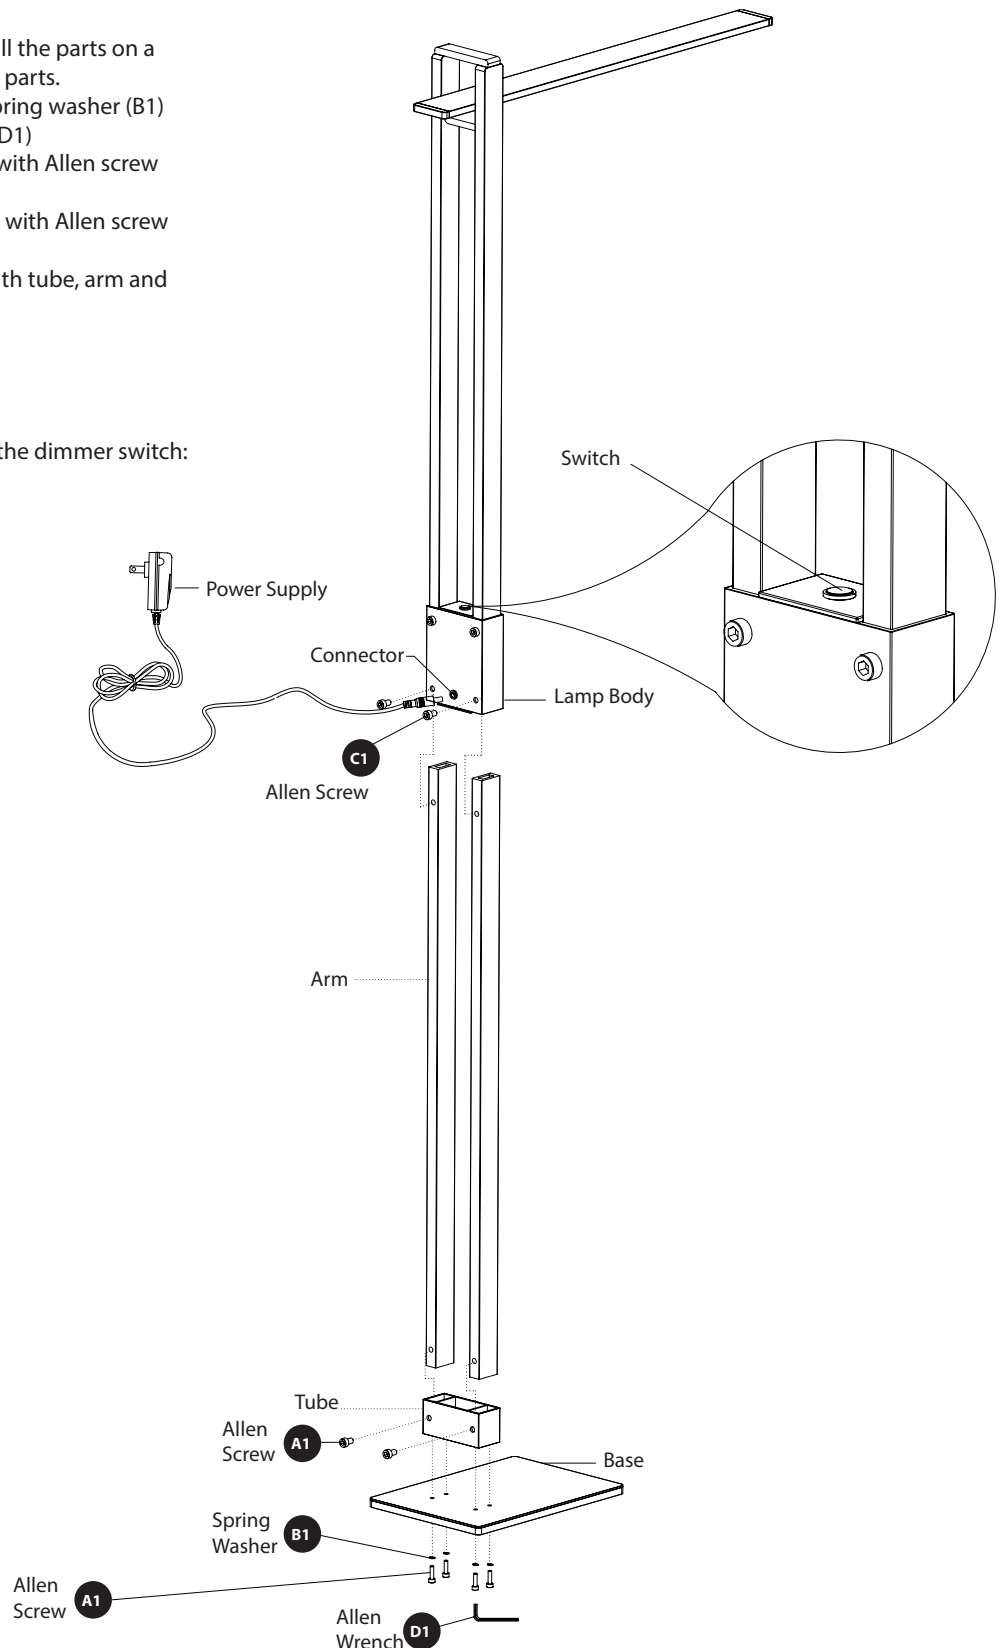

modernforms.com  
Phone (800) 526.2588  
Fax (800) 526.2585

Headquarters/Eastern Distribution Center  
44 Harbor Park Drive  
Port Washington, NY 11050

Central Distribution Center  
1600 Distribution Ct  
Lithia Springs, GA 30122

Western Distribution Center  
1750 Archibald Avenue  
Ontario, CA 91760

